

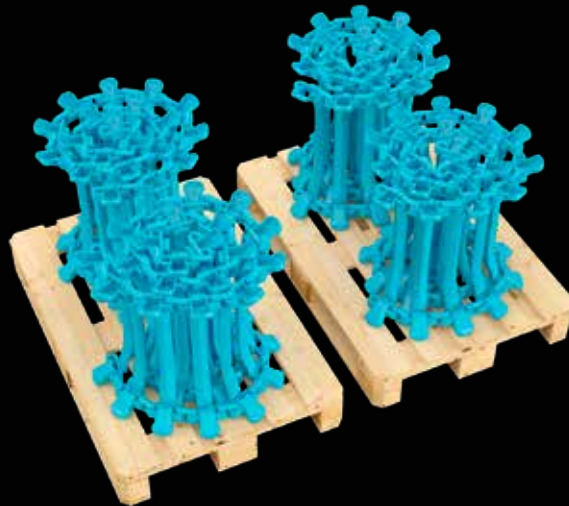


MOUNTING INSTRUCTION

THE TRACKS ARE DELIVERED IN FOUR ROLLS

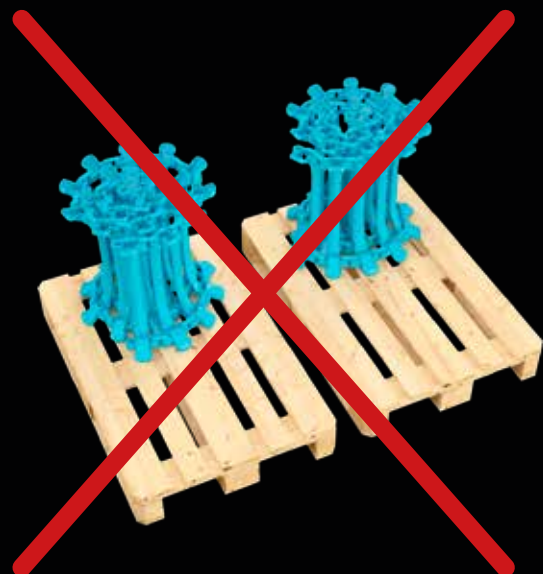

ALWAYS PUT TOGETHER TRACKS FROM THE SAME PALLET

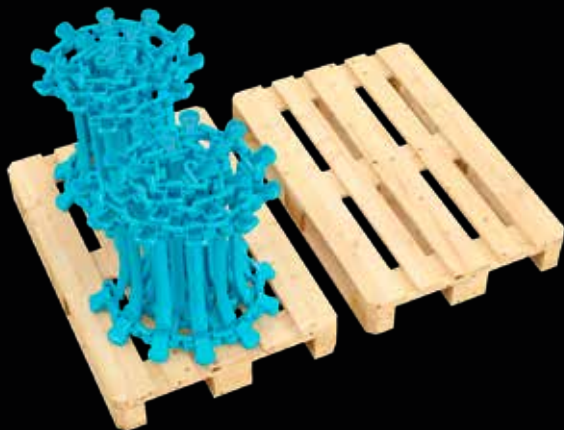

REMEMBER!

**CHECK THE SERIAL NUMBER AGAINST
ATTACHED DOCUMENTS**



SAVE THE GUARANTEE CERTIFICATE




NOTE! THE TOOLS ARE PURCHASED SEPARATELY!



MANUAL




GEARED

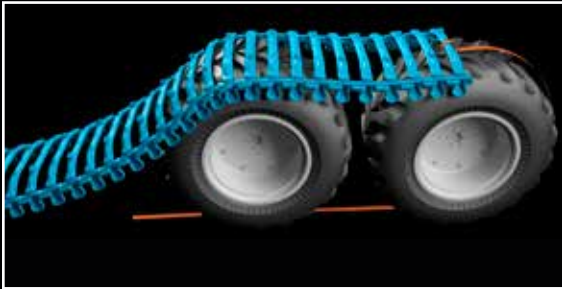


1
Unroll the track parts and screw them together with large track lock. Drive over the track on the bogie using straps/small chain.



2
When the track is on the bogie make sure that the ends are at one end of the bogie.

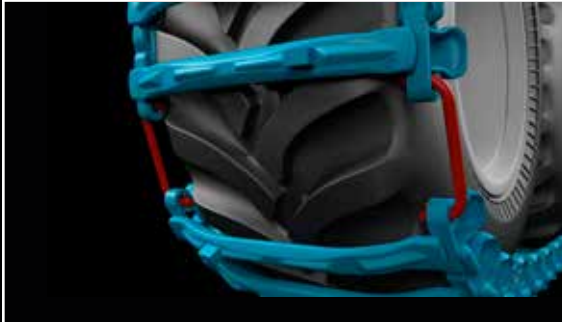


3
Mount the two clamps from the outside into the link hooks.

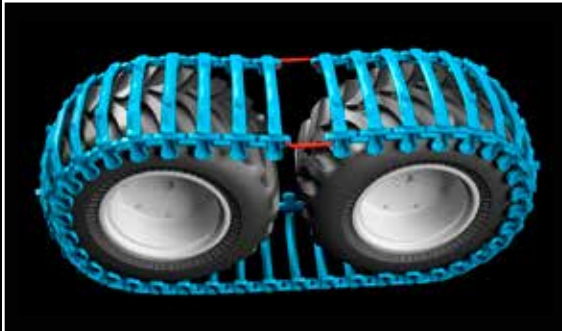


4
Drive slowly forward until the clamps are between the bogie wheels. **NOTE:** If the tires are new, it helps mount significantly, if you moistens them. It may also be needed to help push up the track from the short edge towards the top.



5
Mounting tool – tensioner – with screw.

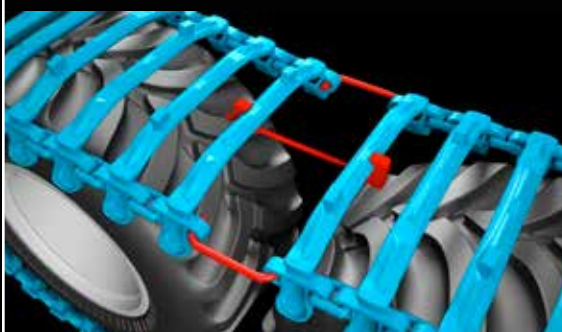

6
Mount the installation tool on the cross members from below. Make sure that it is in the middle. Then use a ratchet shaft screwing together the stretcher with. Don't pull harder than necessary. Pay attention so as not the cross member turns.

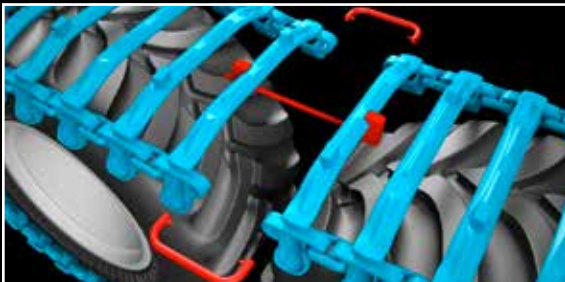

8
When the clamps are loose, remove them from the track.




9
Tighten the track until you can install the track lock.



10
Mount the track lock plate.



11
Mount the bolt from above because of the risk of damage the nut during driving.

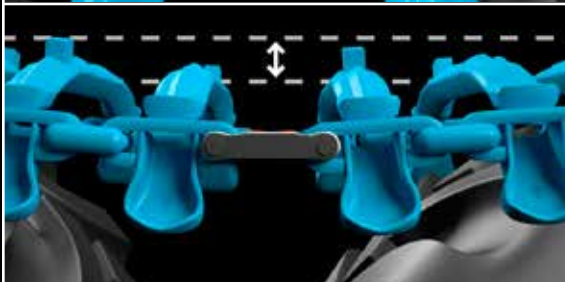

12
Take out the tool. The proper tensioning of the track is when slack between tires is max. 50 mm.

Part.no	Track Model
035-468510	ECO-TRACK
035-468511	ECO-OF
035-468512	ECO-L
035-468513	ECO-U & WIDE
035-468514	ECO-BALTIC
035-468515	ECO-PRO
035-468518	ECO-EVO
035-490460	ECO-EXW
035-490740	ECO-EX



NOTE! THE TOOLS ARE PURCHASED SEPARATELY.